

Maintenance Kit Installation Instructions

HP LaserJet 4/4M

The following parts are included in your Maintenance Kit – C2001-69012

Fuser Assembly	RG5-0454
Transfer Roller	RF5-0349
Pickup Rollers	RB1-2126
MP Tray Pickup Rollers	RB1-2127
Lower Cassette Pickup Rollers	RB1-2632
MP Separation Pad	RF5-0343

* * * ATTENTION * * *

Turn off printer, unplug, and allow it to sit for 30 minutes before performing any of these maintenance procedures.

Approximately 200,000 Pages at 5% Coverage

Fuser Removal & Installation:

- 1) Open the rear door after removing the paper tray and toner cartridges from the printer.
- 2) Remove the two screws that hold the fuser to the printer frame.
- 3) Slightly lift the fuser by both the right & left sides to clear the locator points.
- 4) Pull the fuser from the printer.
- 5) Install in reverse fashion.


Attention!

Do not touch the new transfer roller with your bare hands; oils from skin on the transfer roller can cause print quality defects.

Transfer Rollers Replacement:


The transfer roller is a blank sponge-rubber roller located inside the printer just in front of the black plastic paper feed guide. See Diagram.

- 1) Open the top cover and locate the transfer roller
- 2) Using a flathead screw driver, gently pry up on the transfer Roller shaft between the blue gear & the white, plastic bushing.
- 3) Lift & remove the transfer roller.
- 4) Press down on the left side of the new roller until it snaps into place.

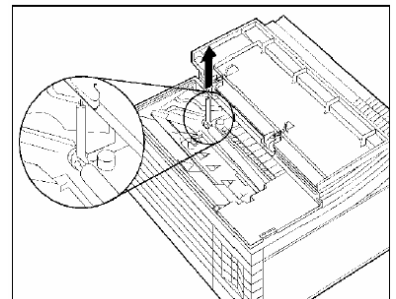

Pickup Rollers Replacement:


- 1) Turn the printer on its left side.
- 2) Locate the main pickup roller on the underside of the printer. Pinch the clip on the pickup roller remove it from the shaft.
- 3) Slide the new main pickup roller on the shaft until it snaps into place. It may be necessary to turn the roller while doing this.

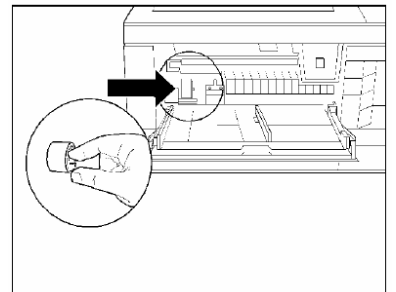

MP Tray Pickup Rollers & Separation Pad Replacement:

- 1) Turn off and unplug the printer.
- 2) Remove the MP Tray (Tray 1) inner black plastic cover.
- 3) Pinch the plastic retaining clip at the side of the roller and slide it off the shaft. Pinch the clip with your right hand while using your left index finger to slide the roller to the right. See figure.

- 4) Insert a small screwdriver into the indent at the front of the separation Pad & gently lift the pad from the seat. See Figure.
- 5) Discard roller and pad.
- 6) Install in reverse fashion.

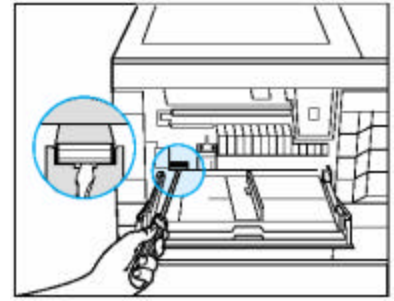

Lower Cassette Pickup Rollers Replacement:

- 1) Remove the lower cassette tray.
- 2) Press the retainers that hold the rollers in place. See Diagram
- 3) Slide the pickup rollers on the shaft.
- 4) Install in reverse fashion.

