

Maintenance Kit Installation Instructions

HP LaserJet 4+/4M+

The following parts are included in your Maintenance Kit – C2037-69010

Fuser Assembly	RG5-0879
MP Separation Pad	RF5-0343
Pickup Roller Assembly	RB1-2127
Transfer Roller Assembly	RF5-0349
Lower Cassette Pickup Rollers	RB1-2650

*** * * ATTENTION * * ***

Turn off printer, unplug, and allow it to sit for 30 minutes before performing any of these maintenance procedures.

Approximately 200,000 Pages at 5% Coverage

Fuser Removal & Installation:

- 1) Remove the paper tray and toner cartridge from the printer.
- 2) Open the rear door. Locate and unfasten the two phillips head screws securing the fuser to the base of the printer.
- 3) Grab the fuser by its left and right metal tabs, lift slightly and pull the fuser straight out of the printer.
- 4) Place the new fuser into the printer and push it in until the screw holes line up with those in the base. Re-secure the two phillips head screws and close the rear cover.

Main Pickup Roller Removal & Installation:

- 1) Turn the printer onto its left side.
- 2) Locate the main pick up roller on the underside of the printer. Pinch the clip on the pick up roller and remove it from the shaft.
- 3) Slide the new main pick up roller onto the shaft until it snaps into place. It may be necessary to turn the roller while doing this.

Manual Feed Tray Pick Up Roller & Separation Pad Removal & Replacement:

- 1) Open the manual feed tray (front tray) and locate the pick up roller.
- 2) If the black plastic envelope feeder access cover is installed, remove it by pinching the middle clip and pulling it out of the printer.
- 3) Pinch the clip and remove the pick up roller from the shaft by sliding it towards the right.
- 4) Using a flathead screwdriver, gently pry up on the silver edge of the separation pad and remove it.
- 5) Snap the new separation pad into place. (Again, the silver edge faces the front of the printer).
- 6) Slide the new manual feed pick up roller onto the shaft until it snaps into place. It may be necessary to turn the roller while doing this.
- 7) Reinstall the black plastic envelope feeder access cover if it was removed in step 2.

Attention!

Do not touch the new transfer roller with your bare hands; oils from skin on the transfer roller can cause print quality defects.

Transfer Roller Replacement:

- 1) Open the top cover and locate the transfer roller.
- 2) Using a flathead screwdriver, gently pry up on the transfer roller shaft between the blue gear and the white plastic bushing.
- 3) Lift and remove the transfer roller.
- 4) Insert the right side of the new transfer roller, then press down on the left side until it snaps into place.

Optional Lower Tray Pick Up Roller Removal & Replacement:

- 1) Separate the optional lower tray from the printer.
- 2) Pinch the release clip on the pick up roller and pull the roller from the shaft. Slide the new pick up roller onto the shaft until it snaps into place. It may be necessary to turn the roller while doing this.