

Maintenance Kit Installation Instructions

HP Color LaserJet 8500/8550 Series

The following parts are included in your Maintenance Kit – C4155A

Fuser	RG5-3060	1
Pick/Separation Rollers	RF5-1834	4
Pick Roller	RF5-1835	2

* * * **ATTENTION** * * *

Turn off printer, unplug, and allow it to sit for 30 minutes before performing any of these maintenance procedures.

Duty Cycle: 100,000 Pages

Fuser Removal & Installation:

Removal:

- 1) Open the lower door on the left side of the printer.
- 2) If the printer contains an optional duplexer, press the green tab on the right side of the duplexer & pull out of the printer.
- 3) Rotate the blue levers down to unlock the fuser.
- 4) On the right side of the fuser, lift the large green lever to release the fuser springs.
- 5) On the left side of the fuser, rotate the blue gear down two or three times to release the fuser.
- 6) Firmly pull the fuser out of the printer by the blue tabs on both ends.

Installation:

- 1) Use the blue tabs on the new fuser to slide it into the printer along the guides. On the left side of the fuser, rotate the blue gear up two or three times until the fuser drops into place. Be sure to use only the blue tabs to push the fuser into place.
- 2) On the right side of the fuser, push the green lever down.
- 3) Rotate the blue levers up until they snap into place.
- 4) If an optional duplexer was removed from the printer, slide the duplexer back into the printer until it clicks into place.
- 5) Close the lower left door.

Pickup/Separation Roller Removal & Replacement:

Removal:

- 1) Remove trays 2 & 3.
- 2) On the end of each roller, pinch the release lever and handle between two fingers & slide the roller off its spindle.
- 3) Locate the roller that is black on the end and repeat the removal process.

Replacement:

- 1) Take the new roller that is black on the end and hold by its handle. Slide the roller onto the spindle until it clicks into place.
- 2) Repeat this procedure with the two rollers that are blue on the end.
- 3) Replace trays 2 & 3.

Fuser Life Reset:

- 1) Turn the printer on & wait until "PRESS SELECT IF FUSER IS NEW" displays. If the message displays proceed to Step 2, else go to Step 3.
- 2) When the printer control panel displays the message, press SELECT to bring the printer online & reset the fuser life count.
- 3) If printer control panel doesn't display the message, press MENU until RESET MENU appears on the printer control panel display.
- 4) Press ITEM until RESET FUSER LIFE COUNT appears.
- 5) Press SELECT to reset the fuser life count.
- 6) Press GO to bring the printer online.

