

Maintenance Kit Installation Instructions

HP LaserJet 5000

The following parts are included in your Maintenance Kit – C4110-69006

Fuser	RG5-5455	1
Pick Roll (Tray 1)	RB2-1820	1
Pick Roll,250-Sht (Tray 2/3)	RB2-1821	1
Pick Roll,500-Sht (Tray 2/3)	RB1-8865	4
Separation Pad (Tray 1)	RF5-3439	1
Separation Pad (Tray 2)	RG9-1485	1
Feed Roller	RF5-2634	2
Transfer Roller	RG5-3579	1

ATTENTION!

Turn off printer, unplug, and allow it to sit for 30 minutes before performing any of these maintenance procedures.

Duty Cycle: 65,000 Pages

Fuser Removal & Installation:

1. Remove the top cover and any output options.
2. If a duplex unit is installed, remove the printer from it by using the handholds. This may require two people.
3. Remove the fuser cover. (If you have a label printer, lift up and remove the fuser cleaner.)
4. Open the rear access door slightly and pull up at a slight angle to remove.
5. Loosen the two screws on the redrive unit; remove the redrive unit by pulling outward by the tabs.
6. Loosen the two screws on the fuser assembly and pull the fuser from the printer; to do so, pull the fuser by the metal tab.
7. Install the new fuser in reverse fashion.

*** Attention ***

Do not touch the new transfer roller or charge roller with your bare hands; oils from skin on the transfer roller can cause print quality defects.

Transfer Roller Replacement:

1. Turn the printer around so the front is facing you; open the front doors and remove the print cartridge.
2. Using the transfer roller removal tool, pry up on the roller with the removal tool, using the frame as a pivot point.
3. Leave the protective wrapper on the transfer roller and insert into the bearing on the right. Then snap the left end of the roller into position.
4. Remove the protective wrapper from the roller and discard.

Charge Roller Replacement:

1. Fit the hole of the positioning tool over the printer door latch; pull the top door down & secure the hooked end of the tool to the printer.
2. Locate the charge roller toward the rear of the opening, grasp it with your left hand and push the right mounting bracket away until the charge roller drops out.
3. Leave the protective wrapper on the roller & insert it into the mounting brackets; push on both brackets to ensure properly installed.
4. Remove the protective wrapper and discard. Remove the positioning tool and discard as well.
5. Insert the print cartridge and close the front access doors. Plug in the printer power cord and turn the printer power on.

Fuser Life Reset

1. Turn the printer power off.
2. While pressing and holding SELECT and RETURN turn the printer power on. Press GO and CONFIG MENU will appear on the display.
3. Press and release MENU>or<MENU until RESET MAINT CNT appears on the second line of the display.
4. Press SELECT twice to reset the counter.
5. Turn the power off and the printer is ready to resume operating.