

Maintenance Kit Installation Instructions

HP Color LaserJet 4500

The following parts are included in your Maintenance Kit – C4197A

| | | |
|-------------------------|----------|---|
| Fuser | RG5-5154 | 1 |
| Pick/Separation Rollers | RF5-1885 | 3 |
| Pick Roller | RB1-8865 | 1 |
| Large Air Filter | RB2-1282 | 1 |
| Small Air Filter | RB2-1283 | 1 |

* * * **ATTENTION** * * *

Turn off printer, unplug, and allow it to sit for 30 minutes before performing any of these maintenance procedures.

Duty Cycle: 60,000 Pages

Fuser Removal & Installation:

Removal:

- 1) Turn the printer so the rear of the unit is facing you. If the printer has a duplexer, open the rear cover of this asm.
- 2) Open the rear door. Release the straps supporting the door by depressing the latches. Lower the rear door.
- 3) Locate the two blue latches on the fuser towards the bottom of the unit and rotate them upward.
- 4) Grab the fuser and remove it from the printer.

Installation:

- 1) Carefully insert the new fuser into the printer.
- 2) Rotate the two blue latches downward to lock the fuser in position.

Air Filter Replacement:

- 1) With the rear door open, remove the two filters from the printer. The large filter is on the left and the small filter is on the right.
- 2) Clean the fan areas to remove any excess dust.
- 3) Insert the new filters into the printer.
- 4) Fasten the support straps to the upper rear door, and then close the door. If the duplexer is attached, close this rear door too.

Paper Pick up Roller Removal & Replacement:

Removal:

- 1) Open Tray 2 and remove it from the printer.
- 2) Locate the pick roller in the top of the tray cavity.
- 3) Squeeze the tabs on the roller and pull towards the right to remove the roller.

Replacement:

- 1) Install the new pick roller onto the shaft by sliding it towards the left until the roller is seated and locked in place.
- 2) Insert Tray 2 into the printer and close.

Pickup/Separation Roller Removal & Replacement:

Removal:

- 1) Move the printer towards the edge of the work surface. Remove Tray 2.
- 2) Locate the blue roller at the front of the tray. There will be an access cover adjacent to the roller.
- 3) Depress the cover release lever to open the access cover.
- 4) Squeeze the tabs on the roller and pull towards the left and slightly upward to remove the roller.

Replacement:

- 1) Install the new pick roller onto the shaft by sliding it towards the right until the roller is seated and locked into place.
- 2) Close the access cover.
- 3) Insert Tray 2 into the printer and close.

*** If the printer has Tray 3 (500-sheet paper feeder) repeat the steps as indicated above. However, the Tray 3 roller will slide in the opposite direction of the Tray 2.**

Fuser Life Reset:

- 1) Plug in the power cord and depress the power button.
- 2) Once the control panel displays READY, depress the MENU button until RESETS MENU appears.
- 3) Depress item until NEW FUSER KIT, SELECT IF DONE appears.
- 4) Finally, press SELECT, then GO and the printer will return to READY status.