

Maintenance Kit Installation Instructions

Lexmark S1625/S1650/S1855

The following parts are included in your Maintenance Kit – 99A0967

Fuser	99A0966
Transfer Roller	99A0179
Charge Roller	99A1017
Pickup Rollers	40X0070


* * * **ATTENTION** * * *

Turn off printer, unplug, and allow it to sit for 30 minutes before performing any of these maintenance procedures.


Duty Cycle: 250,000 Pages @ 5% Coverage

Fuser Removal & Installation:

1. Remove the top cover and any output options.
2. If a duplex unit is installed, remove the printer from it by using the handholds. This may require two people.
3. Remove the fuser cover. (If you have a label printer, lift up and remove the fuser cleaner.)
4. Open the rear access door slightly and pull up at a slight angle to remove.

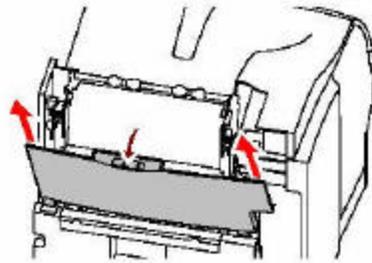

5. Loosen the two screws on the redrive unit; remove the redrive unit by pulling outward by the tabs.
6. Loosen the two screws on the fuser asm and pull the fuser from the printer; to do so, pull the fuser by the metal tab.
7. Install the new fuser in reverse fashion.

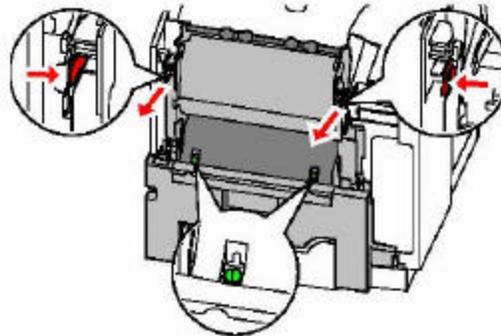


****CAUTION****

Do not touch the new transfer roller or charge roller with your bare hands; oils from skin on the transfer roller can cause print quality defects.

Transfer Roller Replacement:

1. Turn the printer around so the front is facing you; open the front doors and remove the print cartridge.
2. Using the transfer roller removal tool, pry up on the roller with the removal tool, using the frame as a pivot point.

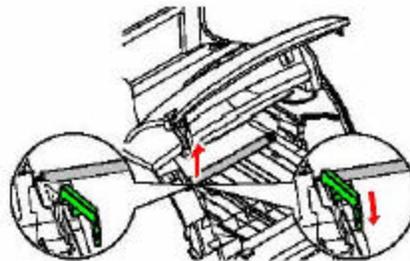

3. Leave the protective wrapper on the transfer roller and insert into the bearing on the right. Then snap the left end of the roller into position.
4. Remove the protective wrapper from the roller and discard.

Charge Roller Replacement:

1. Fit the hole of the positioning tool over the printer door latch; pull the top door down & secure the hooked end of the tool to the printer.
2. Locate the charge roller toward the rear of the opening, grasp it with your left hand and push the right mounting bracket away until the charge roller drops out.
3. Leave the protective wrapper on the roller & insert it into the mounting brackets; push on both brackets to ensure properly installed.
4. Remove the protective wrapper and discard. Remove the positioning tool and discard as well.
5. Insert the print cartridge and close the front access doors. Plug in the printer power cord and turn the printer power on.

Pick Roll Replacement:

1. If you are installing pick rolls on a 2000-sheet feeder option, first open the front access door & remove all of the paper from the 2000-sheet feeder. Be sure to turn the printer off & unplug all cables & cords going into the printer.
2. If the printer is installed on top of an option, such as a tray 2 drawer or a duplex unit, carefully lift the printer up off the option(s).
3. If you are replacing the pick rollers to an optional tray, such as a 250-sheet, 500-sheet, or 2000-sheet feeder option, remove the paper tray and all of the paper from the option and continue with step 4
If you are replacing the pick rollers to paper tray 1 or the standard paper tray, do the following:
 - a) Remove the output options, such as an output stack or a 5-bin mailbox.
 - b) Open the top front cover & remove the toner cartridge. Set to the side & close the front cover.
 - c) Remove Paper Tray 1.
 - d) Lay the printer on its side, right side down. This gives you access to the pick rolls.
4. Look into the area of the printer where the paper tray was installed. Look for the autocompensator/pick arm assembly. It is located along the ceiling/top of the area and is a black plastic arm in the shape of a "T".
5. You should be able to see the pick rolls on the end of the "T"-shaped arm. Each pick roll is a rubber tire mounted on a black plastic wheel.
6. Pull the black plastic arm down. There is a tab on the shaft on which each pick roll is mounted.
8. Push the tab in towards the center of the wheel. While holding in the tab, remove the old pick roll.
9. Install the new pick roll. Make sure the roller is installed in the correct orientation. When installed, the arrows embossed on the plastic should always point clockwise
10. Snap the new pick rolls onto the shaft. Confirm that the roller is securely installed on the shaft.
11. Repeat Steps 6 thru 10 to install the second pick roll. Repeat these steps for each paper tray you wish to replace the pick rolls.
12. Reassemble the printer. To do this, follow these steps.
 - a) If the printer is on its side, set it back on the base.
 - b) Reinstall all the paper trays you removed
 - c) If there were paper feed options installed under the printer, reassemble any options that were unstacked. Then lift the printer & set it back down on top of the option(s). Confirm that the printer is secure on top of the paper feed options.
 - d) If any output options were removed from the top of the printer, reinstall.

Clear the '80 scheduled maintenance message & reset the maintenance page count:

1. Turn the printer power off.
2. While pressing and holding SELECT and RETURN turn the printer power on. Press GO and CONFIG MENU will appear on the display.
3. Press and release MENU>or<MENU until RESET MAINT CNT appears on the second line of the display.
4. Press SELECT twice to reset the counter.
5. Turn the power off and the printer is ready to resume operating.